


XVY inverter(old) to WLDR inverter(new)


1,Power line:

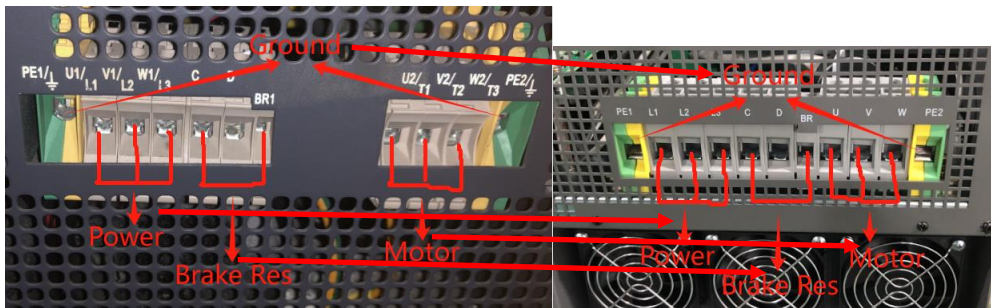

Old one-XVY (one-to-one correspondence) New one-WLDR

2,Signal wiring: (new inverter) Detail: Seeing image below

XVY Signal wiring---Old one-XVY:

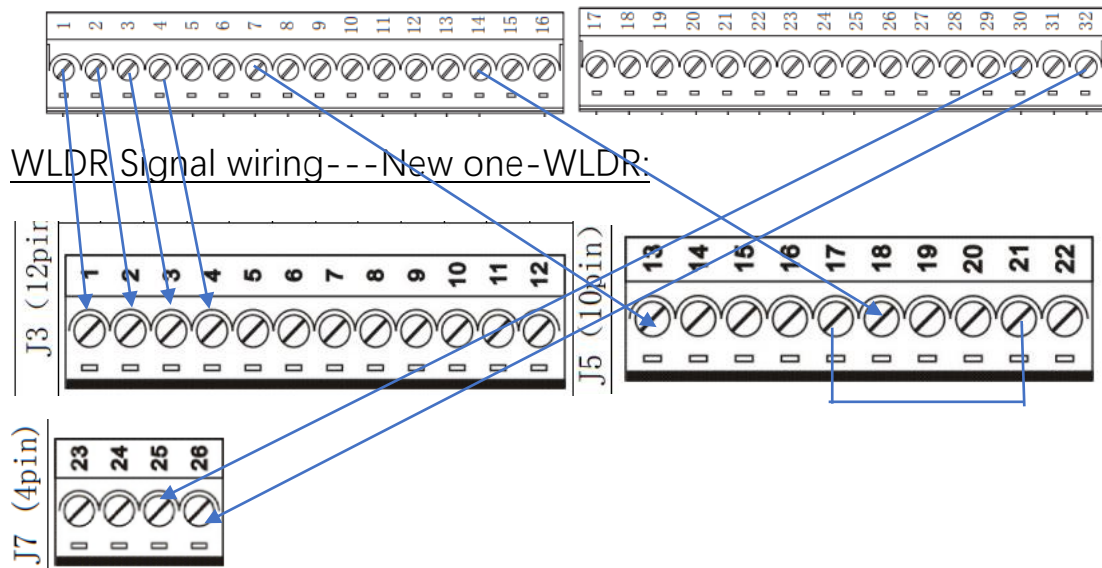

WLDR Signal wiring---New one-WLDR:

- 1+ and 2- : Analog input 1 (0-10V)
- 3 +and 4-: Analog input 2(0-10V)
- 13(digital input 1) : Enable
- 17(input Com) and 21(0V): 17 connect to 21
- 18(24+Output):
- 25 and 26 : Alarm Output

3、Parameter settings

- Select motor code: F177= 18, ENTER (****, password: 3639)
 - Motor zero position self-learning: F099= 2, ENTER , CW and START light are on.
- Wait, wait for the CW and START lights to turn off and F099=0, then press ESC to return, complete the operation, and it can be used normally.